


How to Measure: Can Liners




Standard Can Liner
= Take the circumference of the container and $\div 2 =$ "W" or Width

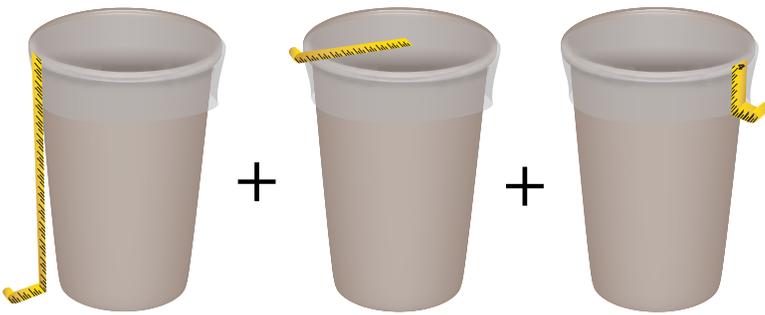

Overhang Length

Measure the container height and add $1/2$ the diameter plus 4" for overhang.
This will be your overall length.

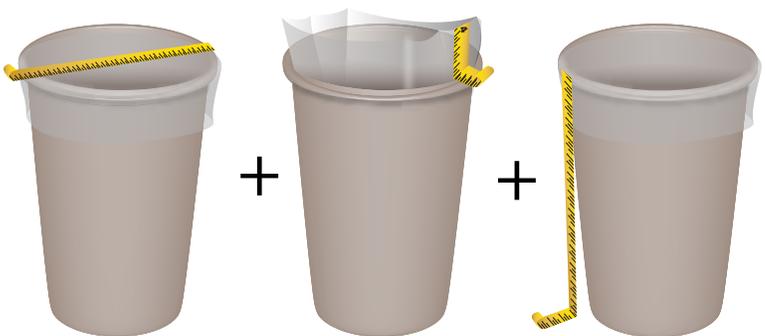

Tie-Off Length

To tie the bag after use add the full diameter plus 4" to the overall height of the container.
This will be your overall length.

For a looser fit add 1"-2" to this number for the flat width of the bag.

Gusseted Can Liner:

Add the width plus the depth (or plus the gusset). That will equal the flat width of the bag.
For example a 16" x 14" x 36" is the same as a 30" x 36" bag.